

INSTALL MANUAL**NOTICE**

Only qualified and experienced individuals or experienced automobile mechanics should remove and install the ignition coil.

The installation of this component requires considerable knowledge and expertise of automobile repair and maintenance, including, in particular, the installation and operation of the ignition coil. Individuals without appropriate training or experience should not attempt to install this component themselves. To ensure safe and proper removal and installation of the ignition coil, even experienced mechanics should obtain and refer to the applicable vehicle Repair and Service Manual.

DISCLAIMER -- Hitachi Automotive Systems America, Inc. (“Hitachi Automotive”) makes no warranties express or implied including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hitachi Automotive shall not in any respect incur any liability for any damages, including but not limited to, direct, indirect, special or consequential arising out of, resulting from, or in any way connected to this manual or your reliance OR USE OF THIS MANUAL whether or not based upon warranty, contract, tort or otherwise.

Ignition Coil Installation

Recommended Tools

Ratchet
Socket(s)

Additional Items



1. Remove the engine cover.



2. Disconnect the ignition coil connector.



3. Remove the ignition coil bolt.
4. Remove the ignition coil.
5. Install the new ignition coil and secure with ignition coil bolt. Torque to factory specifications.
6. Connect the ignition coil connector.
7. Install the engine cover.